

Work Order ID 142119

February 26, 2016 10:19:51 AM

142119

Page 1

Item ID: D205-596-105

Revision ID: URF 14-644

Item Name: Fwd Crosstube - Extended Height 31"

Start Date: 3/4/2016 Start Qty: 1.00

Required Date: 3/18/2016 Req'd Qty: 1.00

Reference:

Approvals:

Process Plan:

Date:

Tooling:

Date:

QC:

Date:

SPC (Y/N):

Date:

N900040100

Setup Start

NS1

Stop

NS2

Cust Item ID:

Customer:

Run Start

NR1

Stop

NR2

Sequence ID/ Work Center ID	Operation Description	Set Up/ Run Hours	Tool ID	Tool #	Plan Code	Accept Qty	Reject Qty	Reject Number	Insp. Stamp
Draw Nbr	Revision Nbr								
D205-596-105	Rev B(DEO) U/R	GK 9/16/3/31	DAS 8 9-89						MCS 16-04-14
100	Document Control	0.00							
100	DOCUMENT CONTROL								
DC	Memo	0.00							
Doc.Control -USB or Paperwork	Photocopy D205-594 bluefile & type labels per PPP D205-596-105 CHG003								
						DAS 28 9-89		APR 11 2016	
105	Crosstubes Chemical Conversion	0.00							
105									
HandFXtube	Memo	0.00							
Hand Finishing Crosstubes	INSIDE AND OUT								RL 16/02/29
107	QC7-Inspect Chemical Conversion Coat	0.00							
107									
QC	Memo	0.00							
Quality Control									1 9B 16-02-29

D205-596-105/142119

DQA: _____ Date: _____



WORK ORDER NON-CONFORMANCE / UPDATE

QA Closed: _____ Date: _____

Work Order update only ☐

Work Order: _____ Part No. _____ NCR No. _____		DISPOSITION Rework ☐ Scrap ☐ Use-as-is ☐ Suspected Unapproved ☐		AGAINST DEPARTMENT/PROCESS Skid-tube ☐ Machining ☐ Thermoforming ☐ Large Fab ☐ Cross tube ☐ Small Fab ☐ Finishing ☐ Composite ☐ Water Jet ☐ Prod. Eng. Coord. ☐ Rec/Store/Packaging ☐ Supplier ☐ Engineering ☐ Quality ☐ Other ☐					
Date :		Step #:		QTY Effective :			MRB (QSI042) Approval Completed By Lead hand / Supervisor Approval Verification QC / QA Coordinator Approval		
Description Work Order Deviation				Disposition					
Root Cause		FAULT CATEGORY							
Environment ☐	No Re-verification ☐	Pressure/Forced ☐	Temperature/Cure ☐	Power Loss/Surge ☐	Positioned Wrong ☐				
Design ☐	Operator ☐	Bending ☐	Set-up ☐	Folio/Program ☐	Outside Dimensions ☐				
Doc/Data ☐	Offset/Setup ☐	Centre Not Concentric ☐	BOM/Route ☐	Grain ☐	Over/Under tolerance ☐				
Equip/Tooling ☐	Supplier ☐	Cracks ☐	Broken/Damage/Defect ☐	Weld ☐	Part Incorrect ☐				
Handling/Pre ☐	Training ☐	Crimp/Kink/Ripple/Wave ☐	Inspection Incomplete/Unqualified ☐	Wrong Stock Pulled ☐	Part Lost/Missing ☐				
Material ☐	Use for Testing ☐	Cuffs ☐	Contamination ☐	Out of Sequence ☐	Part Moved ☐				
Internal Transport ☐	Poor Information ☐	Crushing ☐	Countersink ☐	Off-set ☐	Drawing ☐				
Tribal Knowledge ☐	Rushing ☐	Heat Treat ☐	Cut Too Short ☐	Mislabeled ☐	Finish ☐				
LOA ☐	Product Improvement ☐	Wave/Twist in Tube ☐	Instructions Incomplete/Unclear ☐	Fit/Function ☐	Misread ☐				
Substation ☐	Process Improvement ☐	Marks/Chatter ☐	Drill Holes ☐	Misaligned/off center ☐	Turning Sequence ☐				
Past Expiry Date ☐	Manufacturing Process ☐	OTHER : _____							
Misidentified ☐	Past Due ☐								

Work Order ID 142119

February 26, 2016 10:19:52 AM

142119

Page 2

Item ID: D205-596-105 Accept ***N900040100*** Setup Start ***NS1***
 Revision ID: URF 14-644 Stop ***NS2***
 Item Name: Fwd Crosstube - Extended Height 31"
 Start Date: 3/4/2016 Start Qty: 1.00 ***1*** Cust Item ID:
 Required Date: 3/18/2016 Req'd Qty: 1.00 ***1*** Customer:
 Reference:

Approvals: Process Plan: _____ Date: _____ Tooling: _____ Date: _____ Run Start ***NR1***
 QC: _____ Date: _____ SPC (Y/N): _____ Date: _____ Stop ***NR2***

Sequence ID/ Work Center ID	Operation Description	Set Up/ Run Hours	Tool ID	Tool #	Plan Code	Accept Qty	Reject Qty	Reject Number	Insp. Stamp
110		0.01							
110	BENDING MACHINE - CROSSTUBES					<u>BCL</u>	<u>16/03/1401</u>		
CNC Bend 2	Memo	0.01							
CNC Alpha 160 Bender	Bend as per Dwg D2889 using CNC bender program								
130		0.00							DAS 38 9-89
130	QC15- Crosstube Dimensional Check					<u>1</u>			
QC	Memo	0.00							
Quality Control									16-03-01
140		0.00							
140	Crosstubes					<u>BCL</u>	<u>16/03/103</u>		
Crosstubes	Memo	0.01							
Crosstubes	1-Cut as per Dwg D205-596-105								
	2-*** WEAR LATEX GLOVES WHEN HANDLING CROSSTUBE***								
	Deburr & Inspect for surface damage. Polish cut surface.Scribe part # and batch								
	# on one end of tube.								

DQA: _____ Date: _____



WORK ORDER NON-CONFORMANCE / UPDATE

QA Closed: _____ Date: _____

Work Order update only ☐

Work Order: _____ Part No. _____ NCR No. _____		DISPOSITION Rework ☐ Scrap ☐ Use-as-is ☐ Suspected Unapproved ☐		AGAINST DEPARTMENT/PROCESS Skid-tube ☐ Machining ☐ Thermoforming ☐ Large Fab ☐ Cross tube ☐ Small Fab ☐ Finishing ☐ Composite ☐ Water Jet ☐ Prod. Eng. Coord. ☐ Rec/Store/Packaging ☐ Supplier ☐ Engineering ☐ Quality ☐ Other ☐					
Date :		Step #:		QTY Effective :			MRB (QSI042) Approval Completed By Lead hand / Supervisor Approval Verification QC / QA Coordinator Approval		
Description Work Order Deviation				Disposition					
Root Cause Environment ☐ Design ☐ Doc/Data ☐ Equip/Tooling ☐ Handling/Pre ☐ Material ☐ Internal Transport ☐ Tribal Knowledge ☐ LOA ☐ Substation ☐ Past Expiry Date ☐ Misidentified ☐ No Re-verification ☐ Operator ☐ Offset/Setup ☐ Supplier ☐ Training ☐ Use for Testing ☐ Poor Information ☐ Rushing ☐ Product Improvement ☐ Process Improvement ☐ Manufacturing Process ☐ Past Due ☐		FAULT CATEGORY Pressure/Forced ☐ Bending ☐ Centre Not Concentric ☐ Cracks ☐ Crimp/Kink/Ripple/Wave ☐ Cuffs ☐ Crushing ☐ Heat Treat ☐ Wave/Twist in Tube ☐ Marks/Chatter ☐ Temperature/Cure ☐ Set-up ☐ BOM/Route ☐ Broken/Damage/Defect ☐ Inspection Incomplete/Unqualified ☐ Contamination ☐ Countersink ☐ Cut Too Short ☐ Instructions Incomplete/Unclear ☐ Drill Holes ☐ Power Loss/Surge ☐ Folio/Program ☐ Grain ☐ Weld ☐ Wrong Stock Pulled ☐ Out of Sequence ☐ Off-set ☐ Mislabeled ☐ Fit/Function ☐ Misaligned/off center ☐ Positioned Wrong ☐ Outside Dimensions ☐ Over/Under tolerance ☐ Part Incorrect ☐ Part Lost/Missing ☐ Part Moved ☐ Drawing ☐ Finish ☐ Misread ☐ Turning Sequence ☐		OTHER : ☐					

Work Order ID 142119

February 26, 2016 10:19:52 AM

142119

Page 3

Item ID: D205-596-105

Accept

N900040100Setup Start ***NS1***

Revision ID: URF 14-644

Item Name: Fwd Crosstube - Extended Height 31"

Stop ***NS2***

Start Date: 3/4/2016 Start Qty: 1.00

1

Cust Item ID:

Required Date: 3/18/2016 Req'd Qty: 1.00

1

Customer:

Reference:

Approvals: Process Plan: _____ Date: _____ Tooling: _____ Date: _____

Run Start ***NR1***

QC: _____ Date: _____ SPC (Y/N): _____ Date: _____

Stop ***NR2***

Sequence ID/ Work Center ID	Operation Description	Set Up/ Run Hours	Tool ID	Tool #	Plan Code	Accept Qty	Reject Qty	Reject Number	Insp. Stamp
150		0.00							
150									
HandFXtube	Memo	0.00							
Hand Finishing Crosstubes	***IMMEDIATELY AFTER GRINDING***								
	1- PRESSURE WASH X-TUBE INSIDE AND OUT								
	2- ALODINE AND ACID ETCH X-TUBE INSIDE AND OUT AS PER QSI005.								
155	QC7-Inspect Chemical Conversion Coat	0.00							
155									
QC	Memo	0.00							
Quality Control									
									DAS 38 9-89 MAR 03 2016
160	QC5- Inspect part completeness to step on W/O	0.00							
160									
QC	Memo	0.00							
Quality Control									
									DAS 49 9-89 16/03/03

DQA: _____ Date: _____



WORK ORDER NON-CONFORMANCE / UPDATE

QA Closed: _____ Date: _____

Work Order update only ☐

Work Order: _____ Part No. _____ NCR No. _____		DISPOSITION Rework ☐ Scrap ☐ Use-as-is ☐ Suspected Unapproved ☐		AGAINST DEPARTMENT/PROCESS Skid-tube ☐ Machining ☐ Thermoforming ☐ Large Fab ☐ Cross tube ☐ Small Fab ☐ Finishing ☐ Composite ☐ Water Jet ☐ Prod. Eng. Coord. ☐ Rec/Store/Packaging ☐ Supplier ☐ Engineering ☐ Quality ☐ Other ☐					
Date :		Step #:		QTY Effective :			MRB (QSI042) Approval Completed By Lead hand / Supervisor Approval Verification QC / QA Coordinator Approval		
Description Work Order Deviation				Disposition					
Root Cause Environment ☐ Design ☐ Doc/Data ☐ Equip/Tooling ☐ Handling/Pre ☐ Material ☐ Internal Transport ☐ Tribal Knowledge ☐ LOA ☐ Substation ☐ Past Expiry Date ☐ Misidentified ☐ No Re-verification ☐ Operator ☐ Offset/Setup ☐ Supplier ☐ Training ☐ Use for Testing ☐ Poor Information ☐ Rushing ☐ Product Improvement ☐ Process Improvement ☐ Manufacturing Process ☐ Past Due ☐		FAULT CATEGORY Pressure/Forced ☐ Bending ☐ Centre Not Concentric ☐ Cracks ☐ Crimp/Kink/Ripple/Wave ☐ Cuffs ☐ Crushing ☐ Heat Treat ☐ Wave/Twist in Tube ☐ Marks/Chatter ☐ Temperature/Cure ☐ Set-up ☐ BOM/Route ☐ Broken/Damage/Defect ☐ Inspection Incomplete/Unqualified ☐ Contamination ☐ Countersink ☐ Cut Too Short ☐ Instructions Incomplete/Unclear ☐ Drill Holes ☐ Power Loss/Surge ☐ Folio/Program ☐ Grain ☐ Weld ☐ Wrong Stock Pulled ☐ Out of Sequence ☐ Off-set ☐ Mislabeled ☐ Fit/Function ☐ Misaligned/off center ☐ Positioned Wrong ☐ Outside Dimensions ☐ Over/Under tolerance ☐ Part Incorrect ☐ Part Lost/Missing ☐ Part Moved ☐ Drawing ☐ Finish ☐ Misread ☐ Turning Sequence ☐							
		OTHER : ☐							

DQA: _____ Date: _____

**WORK ORDER NON-CONFORMANCE / UPDATE**

QA Closed: _____ Date: _____

Work Order update only ☐

Work Order: _____ Part No. _____ NCR No. _____		DISPOSITION Rework ☐ Scrap ☐ Use-as-is ☐ Suspected Unapproved ☐		AGAINST DEPARTMENT/PROCESS Skid-tube ☐ Machining ☐ Thermoforming ☐ Large Fab ☐ Cross tube ☐ Small Fab ☐ Finishing ☐ Composite ☐ Water Jet ☐ Prod. Eng. Coord. ☐ Rec/Store/Packaging ☐ Supplier ☐ Engineering ☐ Quality ☐ Other ☐					
Date :		Step #:		QTY Effective :			MRB (QSI042) Approval Completed By Lead hand / Supervisor Approval Verification QC / QA Coordinator Approval		
Description Work Order Deviation				Disposition					
Root Cause		FAULT CATEGORY							
Environment ☐	No Re-verification ☐	Pressure/Forced ☐	Temperature/Cure ☐	Power Loss/Surge ☐	Positioned Wrong ☐				
Design ☐	Operator ☐	Bending ☐	Set-up ☐	Folio/Program ☐	Outside Dimensions ☐				
Doc/Data ☐	Offset/Setup ☐	Centre Not Concentric ☐	BOM/Route ☐	Grain ☐	Over/Under tolerance ☐				
Equip/Tooling ☐	Supplier ☐	Cracks ☐	Broken/Damage/Defect ☐	Weld ☐	Part Incorrect ☐				
Handling/Pre ☐	Training ☐	Crimp/Kink/Ripple/Wave ☐	Inspection Incomplete/Unqualified ☐	Wrong Stock Pulled ☐	Part Lost/Missing ☐				
Material ☐	Use for Testing ☐	Cuffs ☐	Contamination ☐	Out of Sequence ☐	Part Moved ☐				
Internal Transport ☐	Poor Information ☐	Crushing ☐	Countersink ☐	Off-set ☐	Drawing ☐				
Tribal Knowledge ☐	Rushing ☐	Heat Treat ☐	Cut Too Short ☐	Mislabeled ☐	Finish ☐				
LOA ☐	Product Improvement ☐	Wave/Twist in Tube ☐	Instructions Incomplete/Unclear ☐	Fit/Function ☐	Misread ☐				
Substation ☐	Process Improvement ☐	Marks/Chatter ☐	Drill Holes ☐	Misaligned/off center ☐	Turning Sequence ☐				
Past Expiry Date ☐	Manufacturing Process ☐	OTHER : ☐							
Misidentified ☐	Past Due ☐								

Work Order ID 142119

February 26, 2016 10:19:52 AM

142119

Page 5

Item ID: D205-596-105 Accept ***N900040100*** Setup Start ***NS1***
 Revision ID: URF 14-644 Stop ***NS2***
 Item Name: Fwd Crosstube - Extended Height 31"
 Start Date: 3/4/2016 Start Qty: 1.00 ***1*** Cust Item ID:
 Required Date: 3/18/2016 Req'd Qty: 1.00 ***1*** Customer:
 Reference:

Approvals: Process Plan: _____ Date: _____ Tooling: _____ Date: _____ Run Start ***NR1***
 QC: _____ Date: _____ SPC (Y/N): _____ Date: _____ Stop ***NR2***

Sequence ID/ Work Center ID	Operation Description	Set Up/ Run Hours	Tool ID	Tool #	Plan Code	Accept Qty	Reject Qty	Reject Number	Insp. Stamp
190	Crosstubes	0.00							DAS 41 9-89
190						1			16-3-29
Crosstubes	Memo	0.01							
Crosstubes	1- Lightly scuff the bonded area using a 180 grit sand paper and clean the area with 41058 wash 'n' wipe								
	2- Apply Proseal as per dwg D205-596-105 (DEO). A/R Proseal 890 B-2 Batch: <u>134037</u> EXP: <u>4/16</u>								
	3- Torque clamps 80 to 100 in-lb as per dwg and Note 11 (DEO B-2)								
200	QC5- Inspect part completeness to step on W/O	0.00							DAS 38 9-89
200						1			APR 04 2016
QC	Memo	0.00							
Quality Control	***PRIOR TO PACKAGING RECHECK TORQUE ON CLAMPS AFTER PROSEAL HAS CURED 72HOURS.***								

☆
over

DQA:

Date: 16.05.27



QA Closed:

Date: 16/05/16

WORK ORDER NON-CONFORMANCE / UPDATE

Work Order update only ☐

Work Order: 142119 Part No. D205596-105 NCR No. 16-5780		DISPOSITION Rework ☒ Scrap ☐ Use-as-is ☐ Suspected Unapproved ☐		AGAINST DEPARTMENT/PROCESS Skid-tube ☐ Cross tube ☒ Water Jet ☐ Machining ☐ Small Fab ☐ Prod. Eng. Coord. ☐ Thermoforming ☐ Finishing ☐ Rec/Store/Packaging ☐ Large Fab ☐ Composite ☐ Supplier ☐				Engineering ☒ Quality ☐ Other ☐
Date: 16/3/31		Step #: 190		QTY Effective: ②		MRB (QSI042) Approval DAS 12 9-89 16/3/31		
Description Work Order Deviation				Disposition				
Install MS21920 clamps so mechanism is on top.				Acceptable minor deviation to prevent premature wear of rubber cushion				
				Completed By DAS 12 9-89 16/3/31				
				Lead hand / Supervisor Approval Verification DAS 9 9-89 16-05-13				
				QC / QA Coordinator Approval DAS 9 9-89 16-05-13				
Root Cause Environment ☐ No Re-verification ☐ Design ☐ Operator ☐ Doc/Data ☒ Offset/Setup ☐ Equip/Tooling ☐ Supplier ☐ Handling/Pre ☐ Training ☐ Material ☐ Use for Testing ☐ Internal Transport ☐ Poor Information ☐ Tribal Knowledge ☐ Rushing ☐ LOA ☐ Product Improvement ☐ Substation ☐ Process Improvement ☐ Past Expiry Date ☐ Manufacturing Process ☐ Misidentified ☐ Past Due ☐		FAULT CATEGORY Pressure/Forced ☐ Temperature/Cure ☐ Power Loss/Surge ☐ Positioned Wrong ☐ Bending ☐ Set-up ☐ Folio/Program ☐ Outside Dimensions ☐ Centre Not Concentric ☐ BOM/Route ☐ Grain ☐ Over/Under tolerance ☐ Cracks ☐ Broken/Damage/Defect ☐ Weld ☐ Part Incorrect ☐ Crimp/Kink/Ripple/Wave ☐ Inspection Incomplete/Unqualified ☐ Wrong Stock Pulled ☐ Part Lost/Missing ☐ Cuffs ☐ Contamination ☐ Out of Sequence ☐ Part Moved ☐ Crushing ☐ Countersink ☐ Off-set ☐ Drawing ☒ Heat Treat ☐ Cut Too Short ☐ Misabeled ☐ Finish ☐ Wave/Twist in Tube ☐ Instructions Incomplete/Unclear ☐ Fit/Function ☐ Misread ☐ Marks/Chatter ☐ Drill Holes ☐ Misaligned/off center ☐ Turning Sequence ☐						
		OTHER: ☐						

Work Order ID 142119

February 26, 2016 10:19:52 AM

142119

Page 6

Item ID: D205-596-105

Accept

N900040100Setup Start ***NS1***

Revision ID: URF 14-644

Item Name: Fwd Crosstube - Extended Height 31"

Stop ***NS2***Start Date: 3/4/2016 Start Qty: 1.00 ***1***

Cust Item ID:

Required Date: 3/18/2016 Req'd Qty: 1.00 ***1***

Customer:

Reference:

Approvals: Process Plan: _____ Date: _____ Tooling: _____ Date: _____

Run Start ***NR1***

QC: _____ Date: _____ SPC (Y/N): _____ Date: _____

Stop ***NR2***

Sequence ID/ Work Center ID	Operation Description	Set Up/ Run Hours	Tool ID	Tool #	Plan Code	Accept Qty	Reject Qty	Reject Number	Insp. Stamp
210		0.00							
210	Packaging				DAS		DAS	APR 14 2016	
Packaging	Memo	0.00			28		27		
Packaging	Identify and pack for shipping as per PPP D205-596-105				9-89		9-89		
	Location: _____								
	PPP Rev: _____								
220	QC21- Final Inspection - Work Order Release	0.00							
220									
QC	Memo	0.00							
Quality Control									

MCS APR 14 2016

Jm 16/04/14

MCS APR 14 2016

DQA: _____ Date: _____



WORK ORDER NON-CONFORMANCE / UPDATE

QA Closed: _____ Date: _____

Work Order update only ☐

Work Order: _____ Part No. _____ NCR No. _____		DISPOSITION Rework ☐ Scrap ☐ Use-as-is ☐ Suspected Unapproved ☐		AGAINST DEPARTMENT/PROCESS Skid-tube ☐ Machining ☐ Thermoforming ☐ Large Fab ☐ Cross tube ☐ Small Fab ☐ Finishing ☐ Composite ☐ Water Jet ☐ Prod. Eng. Coord. ☐ Rec/Store/Packaging ☐ Supplier ☐ Engineering ☐ Quality ☐ Other ☐					
Date :		Step #:		QTY Effective :			MRB (QSI042) Approval		
Description Work Order Deviation				Disposition				Completed By Lead hand / Supervisor Approval Verification QC / QA Coordinator Approval	
Root Cause		FAULT CATEGORY							
Environment ☐	No Re-verification ☐	Pressure/Forced ☐	Temperature/Cure ☐	Power Loss/Surge ☐	Positioned Wrong ☐				
Design ☐	Operator ☐	Bending ☐	Set-up ☐	Folio/Program ☐	Outside Dimensions ☐				
Doc/Data ☐	Offset/Setup ☐	Centre Not Concentric ☐	BOM/Route ☐	Grain ☐	Over/Under tolerance ☐				
Equip/Tooling ☐	Supplier ☐	Cracks ☐	Broken/Damage/Defect ☐	Weld ☐	Part Incorrect ☐				
Handling/Pre ☐	Training ☐	Crimp/Kink/Ripple/Wave ☐	Inspection Incomplete/Unqualified ☐	Wrong Stock Pulled ☐	Part Lost/Missing ☐				
Material ☐	Use for Testing ☐	Cuffs ☐	Contamination ☐	Out of Sequence ☐	Part Moved ☐				
Internal Transport ☐	Poor Information ☐	Crushing ☐	Countersink ☐	Off-set ☐	Drawing ☐				
Tribal Knowledge ☐	Rushing ☐	Heat Treat ☐	Cut Too Short ☐	Mislabeled ☐	Finish ☐				
LOA ☐	Product Improvement ☐	Wave/Twist in Tube ☐	Instructions Incomplete/Unclear ☐	Fit/Function ☐	Misread ☐				
Substation ☐	Process Improvement ☐	Marks/Chatter ☐	Drill Holes ☐	Misaligned/off center ☐	Turning Sequence ☐				
Past Expiry Date ☐	Manufacturing Process ☐	OTHER : _____							
Misidentified ☐	Past Due ☐								

Picklist Print

February 26, 2016 10:19:56 AM

Page 1

Work Order ID: 142119

142119

Parent Item: D205-596-105

D205-596-105

Parent Item Name: Fwd Crosstube - Extended Height 31"

Start Date: 3/4/2016

Required Date: 3/18/2016

Start Qty: 1.00

Required Qty: 1.00

Comments:

IPP Rev:D 05.03.21 Added bending procedure KJ/JLM
 IPP Rev:E 08-01-10 ECN 1075 DD
 IPP Rev F 08.04.28 Added bending & mat'l EC verified by: DD IPP rev
 G 10.05.27 chg QC15 to QC6 EC verified by: DD IPP REV:H
 13.11.29 as per dwg DEO B-2 DD VERF:JLM

Component Item ID/ Item Name	Replacement Item ID	Mfg/ Purch	Bin Item	Primary Location	Last Location	Route Seq ID	Unit of Measure	Qty on Hand	Qty per Kit	Total Qty	Qty Issued	Date Issued	Status
---------------------------------	------------------------	---------------	-------------	---------------------	------------------	-----------------	--------------------	----------------	-------------	--------------	---------------	----------------	--------

D6005-180

Manufactured No

110

Each

32.0000

1

1

D6005-180

Crosstube Material

**

1 BL 16/02/29

Location

Loc Qty

Loc Code

LG003

32

103676

20

15647

12

D2893-1

Manufactured No

190

Each

4.0000

2

2

D2893-1

Support

**

DAS

41

9-89

16-3-29

Location

Loc Qty

Loc Code

FG

1

126658

1

LG050

3

141012

3

MS21920-25

Purchased No

190

Each

103.0000

4

4

MS21920-25

Clamp

**

DAS

41

9-89

16-3-29

Location

Loc Qty

Loc Code

FG

10

120920

10

LG050

93

M133718

7

M133990

46

M134131

40

Picklist Print

February 26, 2016 10:19:56 AM

Page 2

Work Order ID: 142119

142119

Parent Item: D205-596-105

D205-596-105

Parent Item Name: Fwd Crosstube - Extended Height 31"

Start Date: 3/4/2016

Required Date: 3/18/2016

Start Qty: 1.00

Required Qty: 1.00

D3595-063-450

Manufactured No

190

Each

52.0000

4

4

D3595-063-450

Rubber Cushion 0.63" wide x 4.50" Long

DAS

41

16-3-29

~~9-89~~

4

Location

Loc Qty

Loc Code

FG

22

129907

10

131013

6

88422

6

LG052


30

140163

30

DART AEROSPACE LTD		Work Order: 142119
Description: Crosstube High-High Fwd		Part Number: D205-596-105
Inspection Dwg: D205-596-105 Rev: B		Page 1 of 1

Required Dimension	Min	Max
Height	32.4	32.6
1/2 Span	54.6	54.8
Angle	49	52
Total Span	109.2	109.6
Bending Passes	3	--
Crushing	--	6%

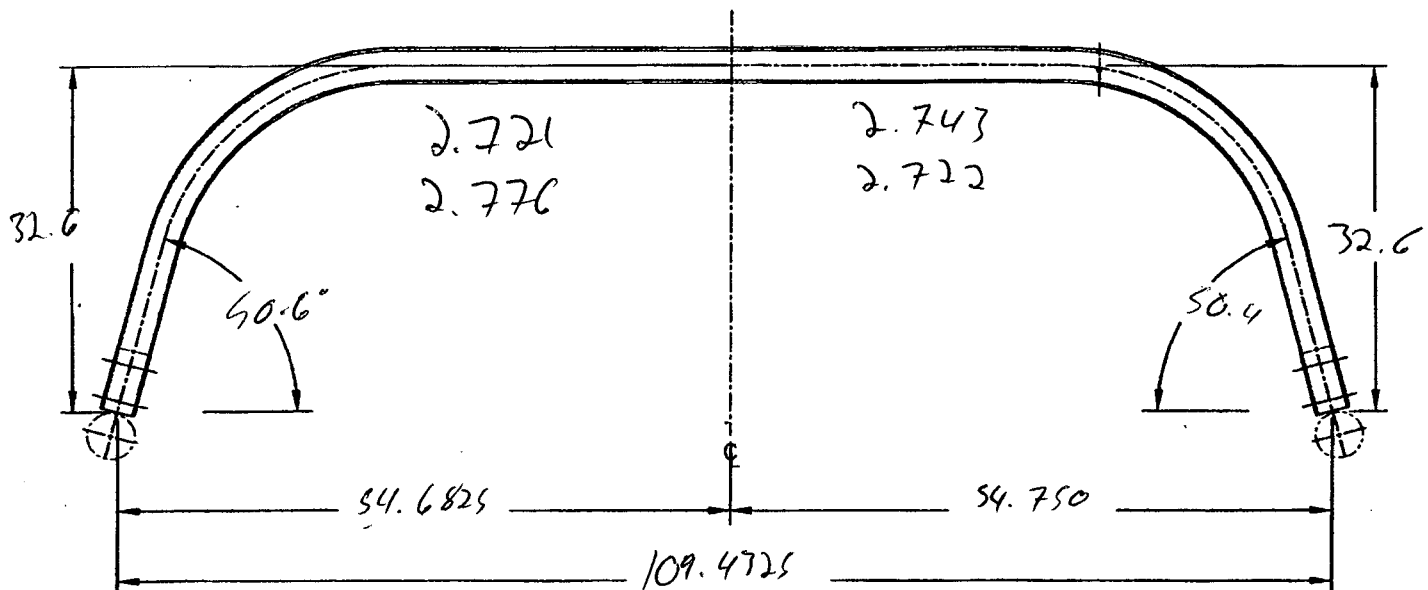

	Side A	Side B
Bending Passes	14	14
Crushing	1%	1.5%
Comments		

QC15 Inspection		DAS
Date		38
		9-89
		16-03-01

Rev	Date	Change	Revised by	Approved
A	07.02.06	New Issue	KJ/JM	
B	08.04.21	Dwg Rev updated	KJ/JM	
C	12.04.16	Added bending, crushing dimensions	KJ	up

PARTS LIST:

Qty	Part Number	Description
X	D205-596-105	CROSSTUBE ASSEMBLY, HI-HI FWD
1	D6005-180	CROSSTUBE
2	D2893-1	SUPPORT
4	D3595-063-450	RUBBER CUSHION
4	MS21920-25	CLAMP
A/R	MAGNOBOND 6398	ROCKWELL SPECIFICATION RBO-120-023 ADHESIVE (TEXTRON/BELL SPEC. 299-947-100, TYPE II, CLASS 2 ADHESIVE)

GENERAL NOTES:

- 1) MATERIAL: MANUFACTURE FROM D6005-180
FINISHED LENGTH = 134.40 ± 0.02
- 2) FINISH: CHEMICAL CONVERSION COAT PER DART QSI 005 4.1
PRIME INSIDE AND OUTSIDE PER DART QSI 005 4.2
PAINT OUTSIDE PER DART 005 4.2
- 3) TOLERANCES: PER DART QSI 018 UNLESS OTHERWISE NOTED
- 4) UNITS: INCHES UNLESS OTHERWISE NOTED
- 5) BREAK SHARP EDGES: N/A
- 6) IDENTIFICATION: SCRIBE DART PART NUMBER AND BATCH NUMBER IN THIS AREA WITH
VIBRATING STYLUS
- 7) WEIGHT: 40 lbs
- 8) PART IS SYMMETRIC ABOUT CENTERLINE
- 9) BEND PROGRESSIVELY WITH A MINIMUM OF 3 PASSES. MAXIMUM TUBE FLATTENING DUE TO
BENDING IS 6% BASED ON O.D.
- 10) EXTREME CARE MUST BE TAKEN TO PROTECT THE OUTSIDE SURFACE OF THE TUBE. THE
OUTSIDE SURFACE MUST BE SMOOTH AND FREE FROM SURFACE DEFECTS SUCH AS
SCRATCHES, NICKS, OR DENTS. DEFECTS UP TO 0.005" MAY BE BLENDED OUT
LONGITUDINALLY. CIRCUMFERENTIAL GRIND MARKS ARE UNACCEPTABLE.
- 11) APPLY A 0.03" TO 0.06" THICK LAYER OF MAGNOBOND 6398 TO THE SURFACE OF D2893-1 THAT
WILL BE IN CONTACT WITH THE CROSSTUBE. LET CURE FOR 12 HOURS AFTER INSTALLATION
AND PRIOR TO PACKAGING.
- 12) INSTALL MS21920-25 CLAMPS WITH D3595-063-450 RUBBER CUSHIONS TO SECURE D2893-1
SUPPORT ON THE TOP SIDE OF THE CROSSTUBE. ENSURE CLAMPS ARE OPPOSITE
CROSSTUBE SUPPORT.
NOTE: IT IS ACCEPTABLE TO SUBSTITUTE MS21920-25 CLAMPS WITH LONGER (MS21920-26) OR
SHORTER (MS21920-24) CLAMPS TO ACCOMODATE VARYING DIAMETERS. ENSURE THERE IS A
MINIMUM OF 1.5 THREADS IN SAFETY ON THE NUTS.
- 13) TORQUE CLAMPS 80 TO 100 IN-LB

UNDER REVIEW

URF14-644 CP


20160225

501
142119

DEO ATTACHED

RELEASED
06-01-16

B	SUPPORT NOW MAGNOBONDED; REMOVE D2856-600-851 ABRASION STRIP; UPDATED NOTES; ADDED D3595-063-450 CUSHION; MS21920-25 WAS MS21920-24	MB	07.12.03
A	NEW ISSUE	DS	02.11.20
REV.	DESCRIPTION	BY	DATE
DESIGN	4	DART AEROSPACE LTD HAWKESBURY, ONTARIO, CANADA	
DRAWN	5		
CHECKED	PH	DRAWING NO.	REV. B
MFG. APPR.	CE	D205-596-105	SHEET 1 OF 2
APPROVED	TH	TITLE	SCALE
DE APPR.	TH	CROSSTUBE ASSEMBLY, HI-HI FWD	NTS
DATE	07.12.03	COPYRIGHT © 2002 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.	

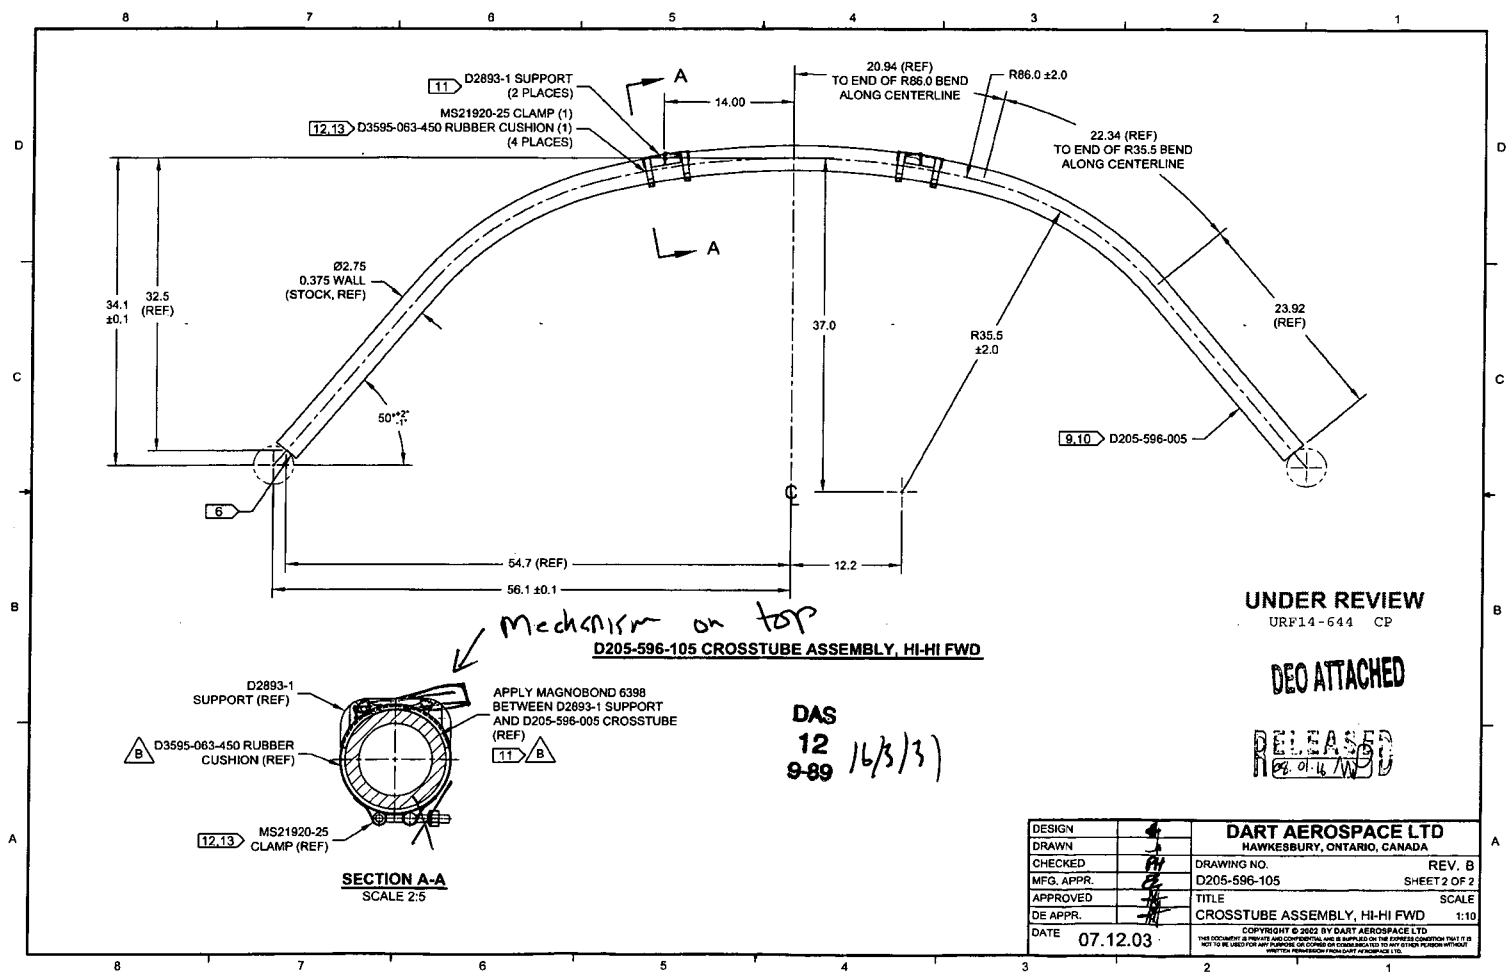

DRAWING NO. D205-596-105	TITLE CROSSTUBE ASS'Y, HI-HI FWD	REV. B	DART AEROSPACE LTD ENGINEERING ORDER		D.E.O. NO. D205-596-105-B-2	SHEET NO. SHEET 1 OF 1	SCALE NTS
DRAWN <i>MP</i>	CHECKED A.P.	MFG. APPR. <i>MP</i>	APPROVED <i>MP</i>	DE APPR. <i>MP</i>			
DATE 13.11.11	DATE 13.11.19	DATE 13.11.19	DATE 13/11/21	DATE 13/11/21			

PURPOSE:
REPLACE MAGNOBOND WITH PROSEAL.

CHANGE:

IS:

Qty	Part Number	Description
A/R	PROSEAL 890 B-2	SEALANT, AMS-S-8802 CLASS B-2

WAS:

A/R	MAGNOBOND 6398	ROCKWELL SPECIFICATION RBO-120-023 ADHESIVE (TEXTRON/BELL SPEC. 299-947-100, TYPE II, CLASS 2 ADHESIVE)
-----	----------------	---

NOTE 11 & 13, SHEET 1 IS AMENDED AS FOLLOWS:

IS:

- 11) TO INSTALL D2893-1 SUPPORT: ABRASE MATING SURFACE OF SUPPORT AND CROSSTUBE WITH 180-GRIT SANDPAPER AND REMOVE RESIDUE WITH MEK (OR EQUIVALENT). APPLY A 0.04" TO 0.07" THICK LAYER OF PROSEAL 890 CLASS B-2 (OR AMS-S-8802 CLASS B-2) SEALANT TO MATING SURFACE OF SUPPORT.
- 13) TORQUE CLAMPS 80 TO 100 IN-LB. ENSURE AT LEAST 1.5 THREADS SHOWING IN SAFETY AND THAT NUT HAS NOT BOTTOMED-OUT AFTER TORQUING. PRIOR TO PACKAGING, RE-CHECK TORQUE ON CLAMPS AFTER PROSEAL 890 SEALANT HAS CURED FOR 72 HOURS.

WAS:

- 11) APPLY A 0.03" TO 0.06" THICK LAYER OF MAGNOBOND 6398 TO THE SURFACE OF D2893-1 THAT WILL BE IN CONTACT WITH THE CROSSTUBE. LET CURE FOR 12 HOURS AFTER INSTALLATION AND PRIOR TO PACKAGING.
- 13) TORQUE CLAMPS 80 TO 100 IN-LB.

RELEASED
2013-11-26
MP

UNDER REVIEW

URF14-644 CP

COPYRIGHT © 2013 BY DART AEROSPACE LTD
THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS
NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT
WRITTEN PERMISSION FROM DART AEROSPACE LTD.

DRAWING NO. D205-596-105	TITLE CROSSTUBE	REV. B	DART AEROSPACE LTD ENGINEERING ORDER		D.E.O. NO. D205-596-105-B-3	SHEET NO. SHEET 1 OF 1	SCALE NTS
DRAWN <i>JP</i>	CHECKED <i>A.P.</i>	MFG. APPR. <i>JA</i>	APPROVED <i>AB</i>	DE APPR. <i>H</i>			
DATE 15.01.15	DATE 15.01.20	DATE 15.01.20	DATE 15.01.20	DATE 15.01.20			

CHANGE:

ADD THE FOLLOWING CROSSTUBE ASSEMBLY:

Qty	Part Number	Description
X	D205-596-105B	CROSSTUBE ASSEMBLY (214 HI-HI FWD)

THE D205-596-105B CROSSTUBE HAS THE SAME PARTS LIST AS THE D205-596-105 CROSSTUBE EXCEPT AS FOLLOWS:

IS:

2	D5017-1	SUPPORT
---	---------	---------

WAS:

2	D2893-1	SUPPORT
---	---------	---------

INSTALL THE SUPPORTS AS SHOWN IN FIGURE 1 OF THIS ENGINEERING ORDER. THE NEW KIT IS OTHERWISE ASSEMBLED PER THE D205-596-105 CROSSTUBE.

RELEASED

2015 JAN 26

ECN 15-510 *JP*

UNDER REVIEW

URF14-644 CP

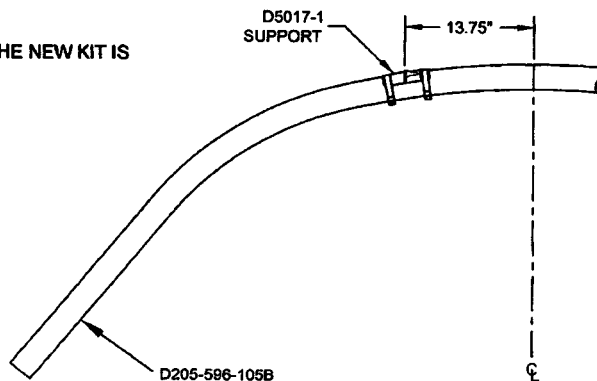


FIGURE 1 - SUPPORT INSTALLATION

COPYRIGHT © 2015 BY DART AEROSPACE LTD
THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS
NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT
WRITTEN PERMISSION FROM DART AEROSPACE LTD.